

1. COMPONENTS

1.1. Major Components

1.2. Kit Contents:

- Rear mounting brackets (2)
- 12-24 screws (16)
- Galvanized hex bolt (1)
- Galvanized hex nut (1)
- 10-32 nylon hex nut (1)
- 1/4 lock washer (1)
- #10 flat washer (12)

2. TOOLS AND EQUIPMENT

In addition to the normal supply of tools, a 9/16 wrench will be necessary.

3. PLANNING

Before you begin your installation, make sure you understand how the unit is to be installed, where the unit will be placed, and how the jumpers will be routed.


4. INSTALLATION

4.1. Foot Cap Installation


The unit comes with all routing hubs and troughs already assembled. The only assembly required is attaching the unit to the frame.

Step 1: The foot extension that comes with the IBD is to be installed first. To do so, remove the two screws on the front of the frame foot cap to remove the cover.

Step 2: Remove the foot cap cover for the IBD by removing the screws in the front and the back.

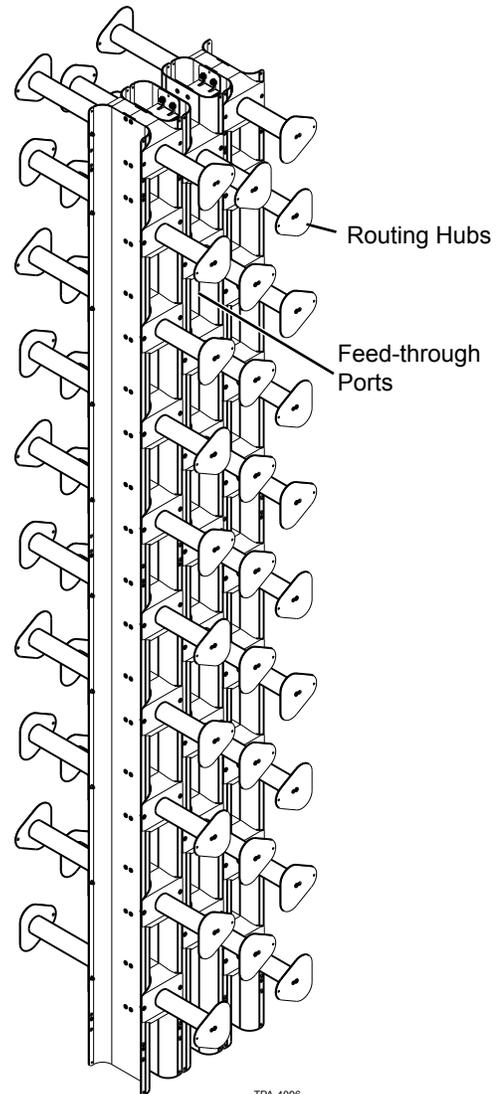


TPA-4096

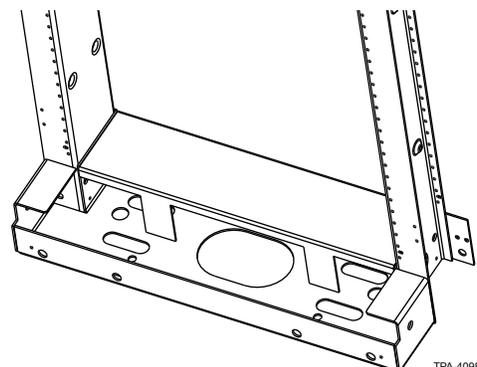

TPA-4098

Step 3: Use the 3/8 hardware (galvanized hex nut and hex bolt) to attach the foot caps together.

Step 4: Reattach covers to both foot caps.

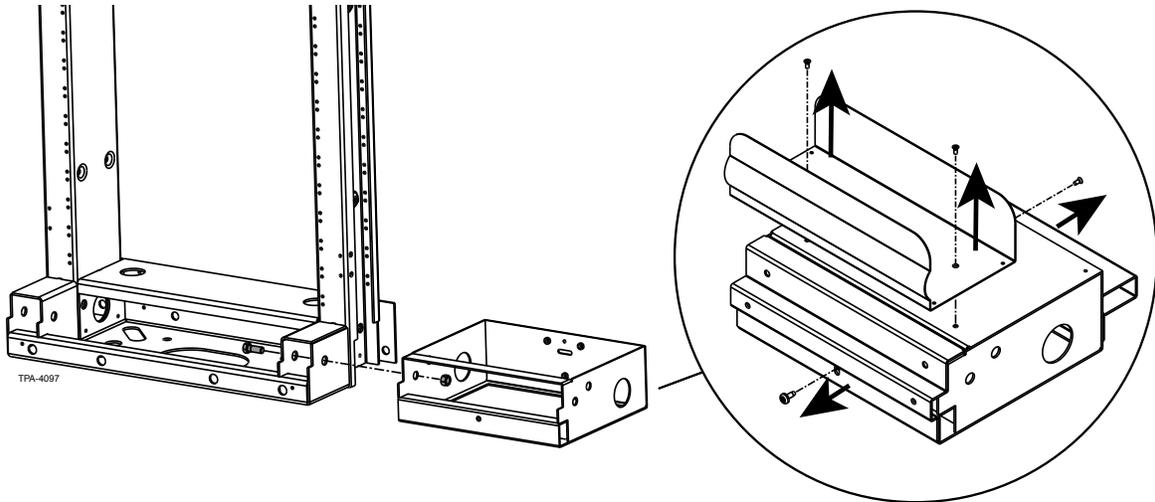


5. STORAGE UNIT INSTALLATION

Step 1: Mount the IBD directly to the front flange of the equipment rack in the locations shown. Attach the two together using the 12-24 screws provided.

Step 2: To increase the stability of the unit, connect the back of the IBD to the back flange of the frame using the rear mounting brackets. Use 12-24 screws to attach the brackets in the locations shown.

NOTE: If you are running fiber down the side of the frame in this area, attach the rear brackets after fiber routing is complete.

Step 3: If using the IBD between two frames, mount the unit on both sides in the same manner described in steps 1 and 2.

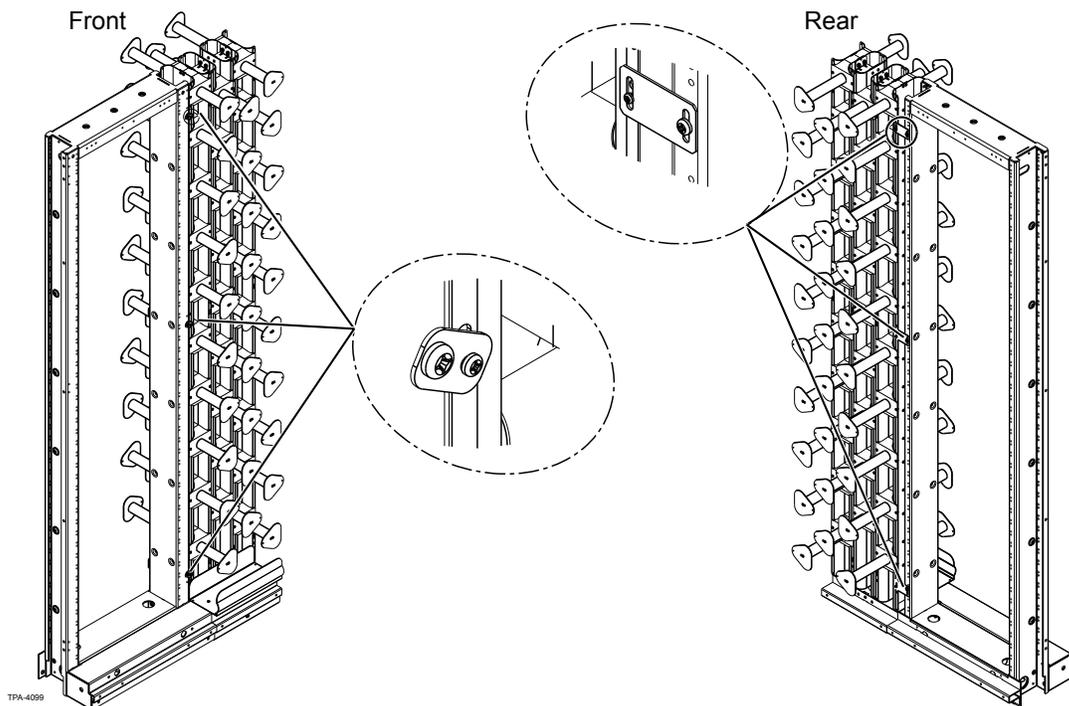

6. CABLE ROUTING


There are a number of ways to use the IBD:

Slack Storage: Store fiber slack by winding excess fiber around the hubs.

Jumper Management: Use the IBD to route jumpers to different locations within the frame.

Jumper Troughs: Use the jumper troughs to route fiber from one equipment rack to another.

7. SPECIFICATIONS

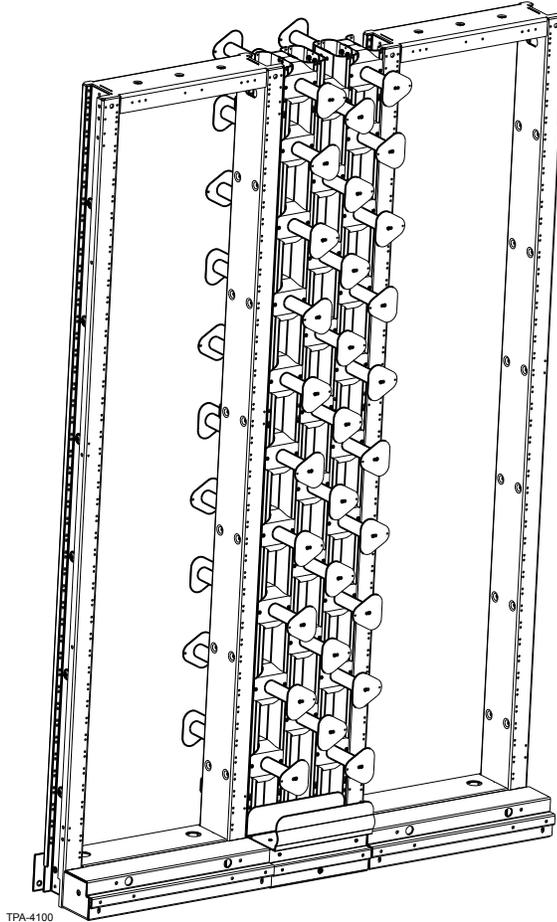

IBD Dimensions

Height: 84 inches

Width: 5 inches

Depth: 15.3 inches

Corning Cable Systems LLC • PO Box 489 • Hickory, NC 28603-0489 USA
1-800-743-2671 • FAX +1-828-325-5060 • International +1-828-901-5000 • <http://www.corning.com/cablesystems>

Corning Cable Systems reserves the right to improve, enhance, and modify the features and specifications of Corning Cable Systems' products without prior notification. Eclipse is a registered trademark of Corning Cable Systems Brands, Inc. All other trademarks are the properties of their respective owners. Corning Cable Systems is ISO 9001 certified.

© 2012 Corning Cable Systems. All rights reserved. Published in Mexico.