


MTP™ PRO Connector Tool

User's Guide



Components:

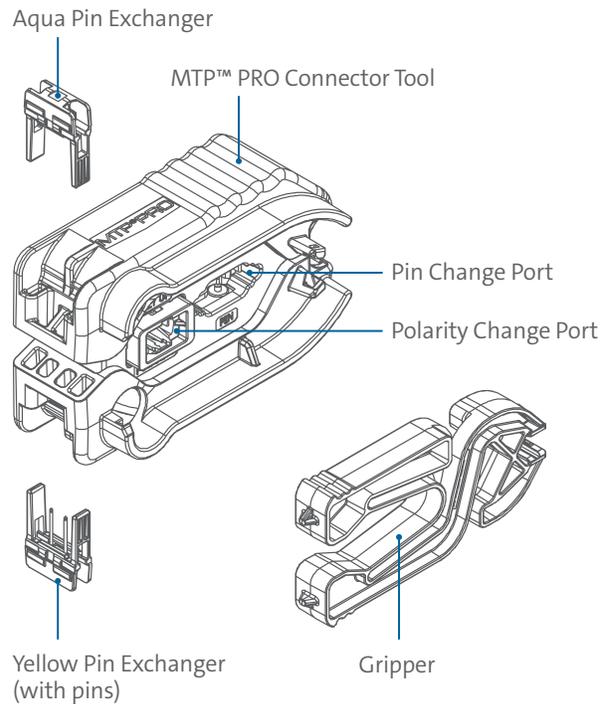

Applications:

- Compatible with MTP PRO connectors only
- Field pin removal: male to female
- Field pin insertion: female to male
- Field polarity change

Pin Removal:

Male to Female



Step 1:

Insert pinned MTP PRO connector in the pin change port until audible “Click.” Do not compress the black handles.



Step 3:

Slide gripper onto the aqua pin exchanger. Compress the black MTP PRO connector tool handles.



Step 2:

Align and insert aqua pin exchanger on the opposite end of the pin change port.



Step 4:

Compress the green gripper handles until they touch and pull the aqua pin exchanger out. Verify removal of pins.

Pin Insertion:

Female to Male



Step 1:

Insert unpinned MTP™ PRO connector in the pin change port until audible “Click.” Do not compress the black handles.



Step 3:

Insert aqua pin exchanger into the opposite end of the pin change port until audible “Click.”



Step 2:

Align aqua pin exchanger with pins attached on the opposite end of the pin change port.



Step 4:

Pull out aqua pin exchanger and verify insertion of the pins onto the MTP PRO connector.

Polarity Change:



Step 1:

Align key on the MTP PRO connector with “KEY UP” on the polarity change port.



Step 3:

Remove the MTP PRO connector from the polarity change port. Verify completion of polarity change.



Step 2:

Insert the MTP PRO connector in the polarity change port until audible “Click.”



Black Key

(factory configured)



Off-White Key

(field configured)



See the MTP PRO connector tool in action when you scan this QR code.