





CORNING

Installation Instructions

Issue 01 - December 2019



OSLC Repair Kit - Cable Ø 3,8 to 6,2 mm

These installation instructions are provided as guidance for the trained craftsperson carrying out the installation.

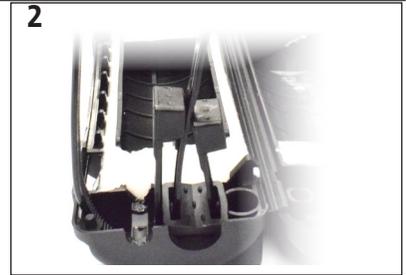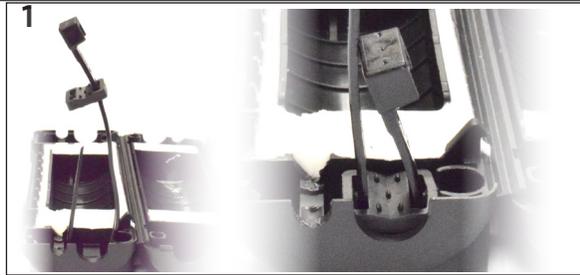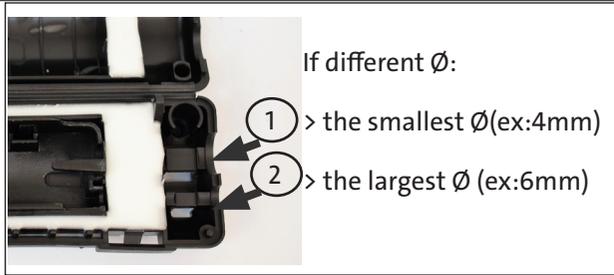
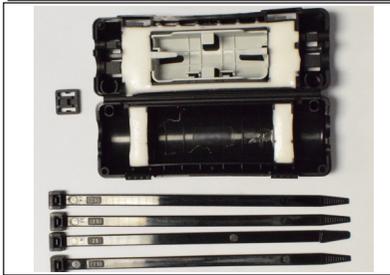


Place wedge and cable ties


Recommendation :
Place the cables on the same side(facilitates storage in small spaces).

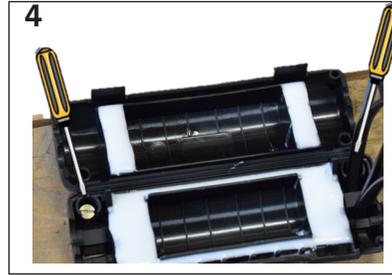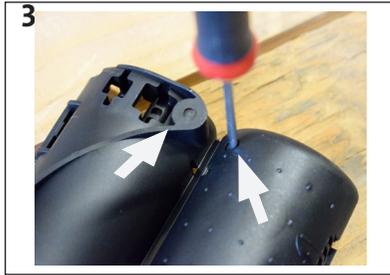


Drill the screw holes on the cover and body.
Place 2 screws Ø4 (not supplied) and fix the box temporarily to carry out the wiring with your hands free.

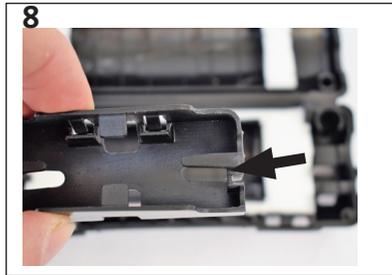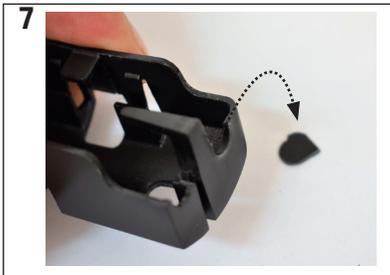

Put the organizer back in place.
Careful about the direction of positioning.

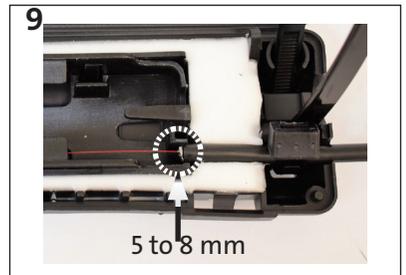

Cable installation:
Prepare the cable lg ~600mm
Place and fix the first cable with the cable tie.
Make sure that end of the cable sheath enters the splice area.
5 to 8mm

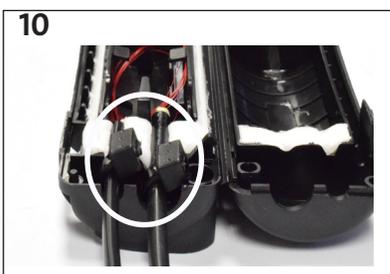




Cable installation:
Repeat the same with the other cable.



Check position head cable.
Cut the cable ties excess.




Splicing:
Make the fibrok® or fusion splice according to the installation instructions.

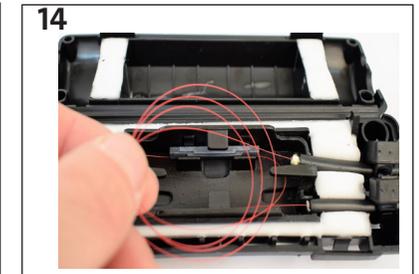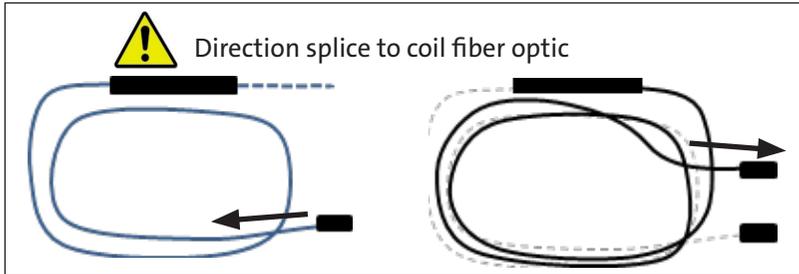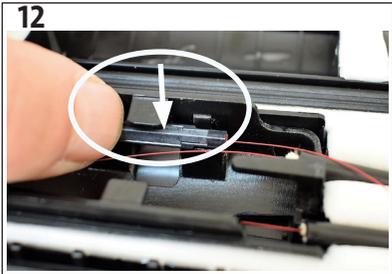

Verification:

- No fiber outside the organizer.
- The cables are attached.
- The fibrlok is well positioned.
- No foreign body on the gel.

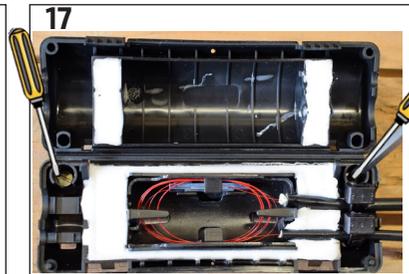

Closing:

Close the closure by pressing the top cover on the bottom. A 'Click' sound will be heard when the latches are locked



Recommendation:

Attach the cable strand with the cable clamps. (protects from pulling on one end of the cable).



Re-opening:

To re-open, press one by one the clips to release them. Take care to keep the sealing area clean during the re-intervention.